



# Dolly Earth Mixer Bath Tub & Shower. – Floor installation steps–


1.Insert the flexible hoses throw the square pole and assembling them to main body turning by hand

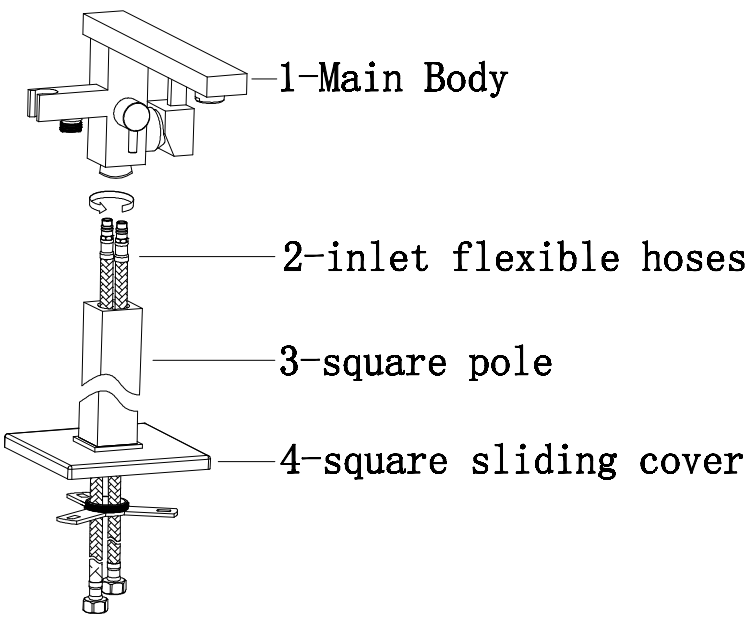


2.Match the square pole with the main body , fix together turning the 2 screws on rear with the key.

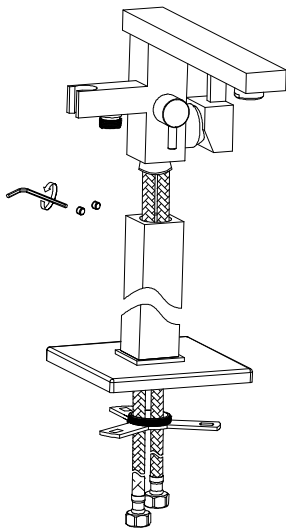


3.Create a chamber in the floor following the above measure with G1/2 male connectors for water net .

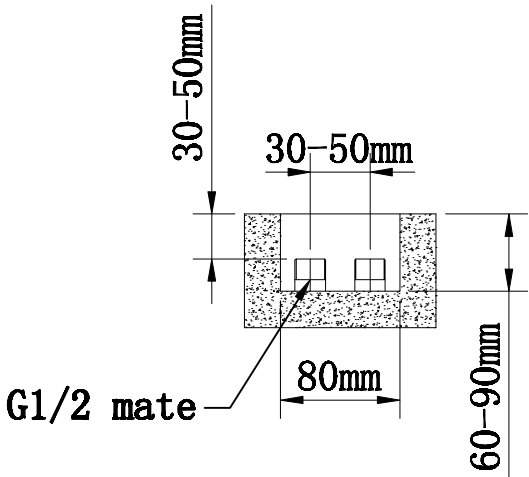

4.Insert the sliding cover on square pole, insert the flexible hose's nuts throw the fixing base and connect the G1/2 nuts with the water net connectors fixing tight by key.

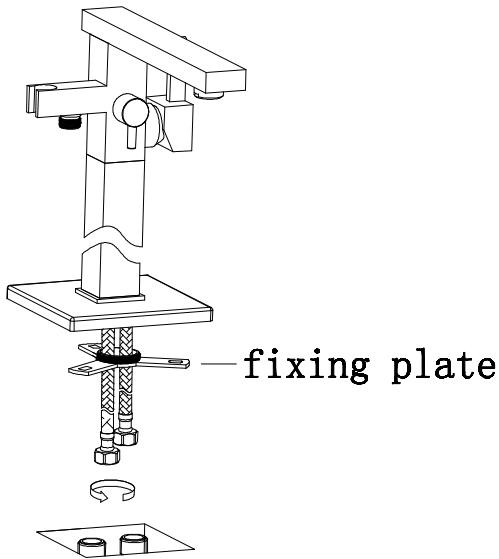

5.Adjust the complete to get correct position ,then drill to fix the base plate.

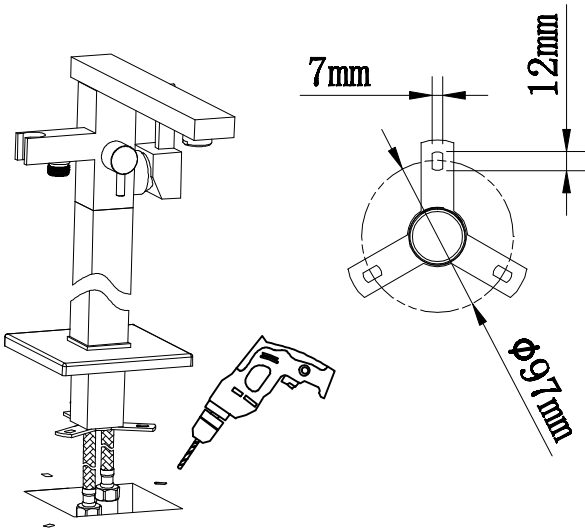

6.Insert the fixing bolts and fix tight in the floor .  
Move the cover to hide the base.

